SERVICE & OPERATING MANUAL

Original Instructions





1: PUMP SPECS

Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®

Safety Information

A IMPORTANT



Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory warranty.



When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.



Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



Nonmetallic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.



WARNING

The use of non-OEM replacement parts will void (or negate) agency certifications, including CE, ATEX, CSA, 3A and EC1935 compliance (Food Contact Materials). Warren Rupp, Inc. cannot ensure nor warrant non-OEM parts to meet the stringent requirements of the certifying agencies.

A WARNING



When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.



Airborne particles and loud noise hazards. Wear eye and ear protection.



In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.



This pump is pressurized internally with air pressure during operation. Make certain that all fasteners and piping connections are in good condition and are reinstalled properly during reassembly.



Use safe practices when lifting

ATEX Pumps - Conditions For Safe Use

- 1. Ambient temperature range is as specified in tables 1 to 3 on the next page (per Annex I of DEKRA 18ATEX0094X)
- 2. ATEX compliant pumps are suitable for use in explosive atmospheres when the equipment is properly grounded in accordance with local electrical codes

3.

4

5.

6.

- Non-Metallic ATEX Pumps only See Explanation of Pump Nomenclature / ATEX Details Page Conductive Polypropylene, conductive Acetal or conductive PVDF pumps are not to be installed in applications where the
- pumps may be subjected to oil, greases and hydraulic liquids.

The optionally provided solenoids shall be protected by a fuse corresponding to its rated current (max 3*Irat according to EN 60127) or by a motor protecting switch with short circuit and thermal instantaneous tripping (set to the rated current) as short circuit protection. For solenoids with a very low rated current, a fuse with the lowest current value according to the indicated standard will be sufficient. The fuse may be accommodated in the associated supply unit or shall be separately arranged. The rated voltage of the fuse shall be equal or greater than the stated rated voltage of the solenoid. The breaking capacity of the fuse shall be as high as or higher than the maximum expected short circuit current at the location of the installation (usually 1500 A). The maximum permissible ripple is 20% for all dc solenoids.

When operating pumps equipped with non-conductive diaphragms that exceed the maximum permissible projected area, as defined in EN ISO 80079-36 : 2016 section 6.7.5 table 8, the following protection methods must be applied - Equipment is always used to transfer electrically conductive fluids or

- Explosive environment is prevented from entering the internal portions of the pump, i.e. dry running.

Pumps provided with the pulse output kit and used in the potentially explosive atmosphere caused by the presence of the combustible dust shall be installed in such a way that the pulse output kit is protected against impact *Not applicable for all pump models — See Explanation of Pump Nomenclature / ATEX Details Page

Model HDB2/HDB50

SANDPIPERPUMP.COM

hdb2dl4sm-rev1222



Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®

Temperature Tables

Ambient Temperature Range [°C]	Process Temperature Range [°C]¹	Temperature Class	Maximum Surface Tem- perature [°C]
	-20°C to +80°C	T5	T100°C
	-20°C to +108°C	T4	T135°C
-20°C to +60°C	-20°C to + 160°C	Т3	T00000
	-20°C to +177°C	(225°C) T2	T200°C

Table 1. Category 1 & Category 2 ATEX Rated Pumps

¹Per CSA standards ANSI LC6-2018 US & Canadian Technical Letter R14, G-Series Natural Gas Models are restricted to (-20°C to + 80°C) process temperature

Table 2. Category 2 ATEX Rated Pumps Equipped with Pulse Output Kit or Integral Solenoid:

Ambient Temperature	Process Temperature	Temperature	Maximum Sur-	Ор	tions
Range [°C]	Range [°C]	Class	face Temperature [°C]	Pulse Output Kit	Integral Solenoid
-20°C to +60°C	-20°C to +100°C	Т5	T100	Х	
-20°C to +50°C	-20°C to +100°C	Т5	T100		х

²ATEX Pulse output or Intergral Solenoid Not Available For All Pump Models See Explanation of Pump Nomenclature / ATEX Details Page

Table 3. Category M1 ATEX Rated Pumps for Mining

Ambient Temperature	Process Temperature
Range [°C]	Range [°C]
-20°C to +60°C	-20°C to +150°C

<u>Note:</u> The ambient temperature range and the process temperature range should not exceed the operating temperature range of the applied non-metallic parts as listed in the manuals of the pumps.



SANDPIPERPUMP.COM hdb2dl4sm-rev1222

Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®



Model HDB2/HDB50 · 3

Table of Contents

SECTION 1: PUMP SPECIFICATIONS......1

- Explanation of Nomenclature
- Performance
- Materials
- Dimensional Drawings

SECTION 2: INSTALLATION & OPERATION ...5

- Principle of Pump Operation
- Recommended Installation Guide
- Troubleshooting Guide

SECTION 3: EXPLODED VIEW......8

- Composite Repair Parts Drawing
- Composite Repair Parts List
- Down Ported Option Drawing
- Material Codes

SECTION 4: AIR END11

- Air Distribution Valve Assembly
- Pilot Valve Assembly

SECTION 5: WET END.....13

Diaphragm Servicing

SECTION 7: WARRANTY & CERTIFICATES..14

- Warranty
- CE Declaration of Conformity Machinery
- ATEX Declaration of Conformity



4 • Model HDB2/HDB50

Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®



SANDPIPERPUMP.COM hdb2dl4sm-rev1222

SANDPIPER

Websites: www.springerpumps.com www.springerparts.com

3: EXP VIEW


1: PUMP SPECS

2: INSTAL & OP

4: AIR END

6: OPTIONAL

Explanation of Pump Nomenclature

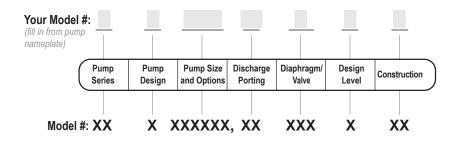

Pump Series HD Heavy Duty

Pump Design

B Solid Ball

Pump Size & Options

- 2 2" 50 2"
- **P1** Intrinsically Safe ATEX Compliant
- Pulse Output
- $\textbf{SB} \hspace{0.1in} \text{Stainless-Brass sleeve and spool set}$

Discharge Porting Position D Down Ported

- T Tan
- Т Тор

Diaphragm Check Valve Materials

- B Nitrile
- C FKM with PTFE
- F FDA Accepted White Nitrile GN Neoprene Backup with PTFE Overlay
- and PTFE Check Balls
- GR Hytrel Backup w/ PTFE Overlay/PTFE Balls
- **GS** Santoprene Backup with PTFE overlay and PTFE Check Balls
- GZ PTFE/Nitrile Bonded
- One-Piece/PTFE Balls H EPDM with PTFE
- N Neoprene
- R Hytrel
- **S** Santoprene
- U Santoprene with PTFE
- V FKM

Design Level

Construction

- A Aluminum Wetted, Aluminum Air
- CI Cast Iron Wetted, Aluminum Air
- II Cast Iron Wetted, Cast Iron Air
- SI Stainless Steel Wetted, Cast Iron Air
- SS Stainless Steel Wetted, Aluminum Air
- HC Alloy-C Wetted, Aluminum Air HI Alloy-C Wetted, Cast Iron Air

Your Serial #: (fill in from pump nameplate)

ATEX Detail

	ATEX Details	Construction	Options
<u>(</u> 2)	II 1 G Ex h IIC T5225°C (T2) Ga II 1D Ex h IIIC T100°CT200°C Da I M1 Ex h I Ma	SI, HI, II	00
	II 2 G Ex h IIC T5225°C (T2) Gb II 2 D Ex h IIIC T100°CT200°C Db	A, CI, SS, HC	00
	II 2 G Ex h ia IIC T5 Gb II 2 D Ex h ia IIIC T100°C Db	A, CI, II, HI, HC, SI, SS	P1




SPRINGER PARTS

Model HDB2/HDB50 · 5

hdb2dl4sm-rev1222

Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®

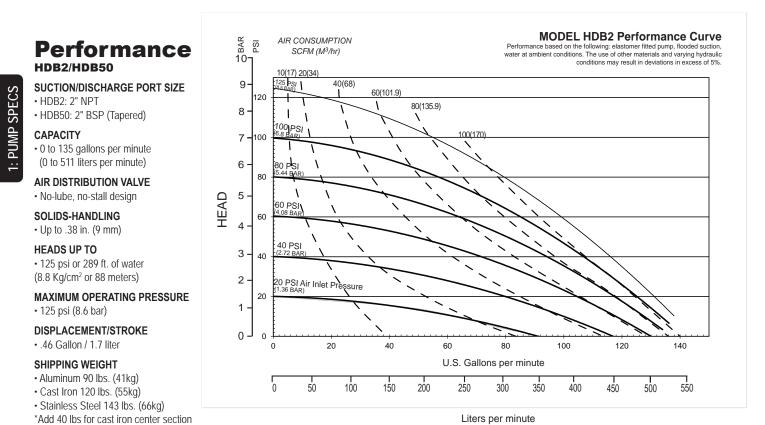

Materials

Material Profile:		rating ratures:	Polypropylene: A thermoplastic polymer. Moderate tensile and flex strength. Resists stong acids and alkali. Attacked by	180°F 82°C	32° 0°0
CAUTION! Operating temperature limitations are as follows:	Max.	Min.	chlorine, fuming nitric acid and other strong oxidizing agents.		
Conductive Acetal: Tough, impact resistant, ductile. Good brasion resistance and low friction surface. Generally inert, with ood chemical resistance except for strong acids and oxidizing	190°F 88°C	-20°F -29°C	PVDF: (Polyvinylidene Fluoride) A durable fluoroplastic with excellent chemical resistance. Excellent for UV applications. High tensile strength and impact resistance.	250°F 121°C	0°F -18°
agents.			Santoprene®: Injection molded thermoplastic elastomer with	275°F	-40°
EPDM: Shows very good water and chemical resistance. Has poor resistance to oils and solvents, but is fair in ketones and	280°F 138°C	-40°F -40°C	no fabric layer. Long mechanical flex life. Excellent abrasion resistance.	135°C	-40°
alcohols.	130 C	-40 C	UHMW PE: A thermoplastic that is highly resistant to a broad	180°F	-35°
FKM: (Fluorocarbon) Shows good resistance to a wide range	350°F	-40°F	range of chemicals. Exhibits outstanding abrasion and impact resistance, along with environmental stress-cracking resistance.	82°C	-37°
of oils and solvents; especially all aliphatic, aromatic and nalogenated hydrocarbons, acids, animal and vegetable oils.	177°C	-40°C	Urethane: Shows good resistance to abrasives. Has poor	150°F	32°
lot water or hot aqueous solutions (over 70°F(21°C)) will			resistance to most solvents and oils.	66°C	0°(
ittack FKM.			Virgin PTFE: (PFA/TFE) Chemically inert, virtually impervious.	220°F	-35
Hytrel®: Good on acids, bases, amines and glycols at room emperatures only.	220°F 104°C	-20°F -29°C	Very few chemicals are known to chemically react with PTFE; molten alkali metals, turbulent liguid or gaseous fluorine and	104°C	-37°
leoprene: All purpose. Resistance to vegetable oils. Generally	200°F	-10°F	a few fluoro-chemicals such as chlorine trifluoride or oxygen		
not affected by moderate chemicals, fats, greases and many	93°C	-23°C	difluoride which readily liberate free fluorine at elevated temperatures.		
bils and solvents. Generally attacked by strong oxidizing acids, ketones, esters and nitro hydrocarbons and chlorinated aromatic hydrocarbons.			Maximum and Minimum Temperatures are the limits for which these ma Temperatures coupled with pressure affect the longevity of diaphragm Maximum life should not be expected at the extreme limits of the tempe	aterials can b pump compo erature range	e operat nents. es.
Nitrile: General purpose, oil-resistant. Shows good solvent, oil,	190°F	-10°F	Metals:		
water and hydraulic fluid resistance. Should not be used with highly polar solvents like acetone and MEK, ozone, chlorinated	88°C	-23°C	Alloy C: Equal to ASTM494 CW-12M-1 specification for nickel and	d nickel allo	v
hydrocarbons and nitro hydrocarbons.			Stainless Steel: Equal to or exceeding ASTM specification A743		
Nylon: 6/6 High strength and toughness over a wide	180°F	32°F	resistant iron chromium, iron chromium nickel and nickel based all		
temperature range. Moderate to good resistance to fuels, oils	82°C	0°C	general applications. Commonly referred to as 316 Stainless Stee		
and chemicals.			For specific applications, always consult the C	hemical Resi	istance

6 • Model HDB2/HDB50

SANDPIPERPUMP.COM hdb2dl4sm-rev1222


CAPACITY



Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®

Dimensional Drawings


HDB2 & HDB50, Down Ported Dimensions are ± .13" (3mm). Figures in parenthesis = millimeters

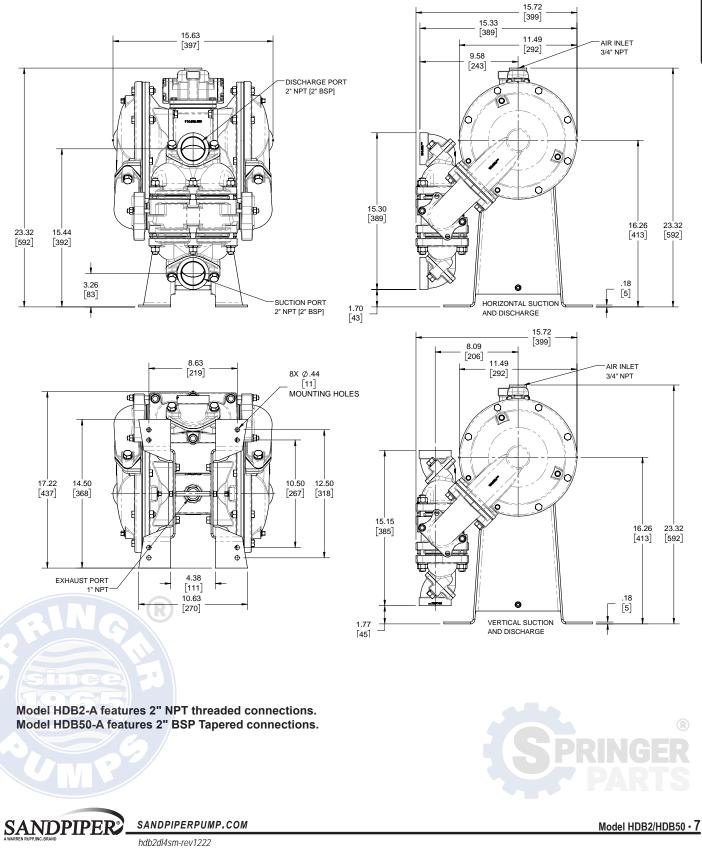


Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®

Dimensional Drawings

HDB2 & HDB50, Top Ported Dimensions are ± .13" (3mm). Figures in parenthesis = millimeters

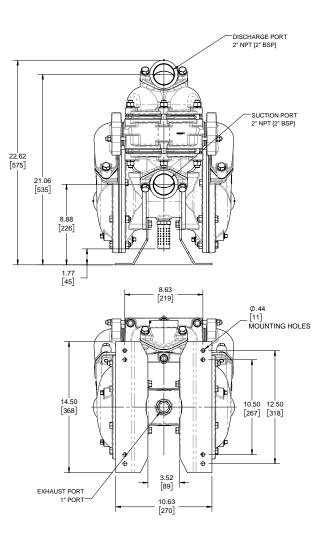

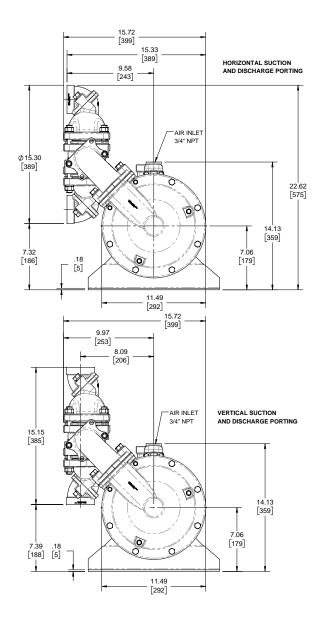

Model HDB2-A features 2" NPT threaded connections. Model HDB50-A features 2" BSP Tapered connections.





8 • Model HDB2/HDB50

Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®

SANDPIPERPUMP.COM


hdb2dl4sm-rev1222

SAND

Websites: www.springerpumps.com www.springerparts.com

1: PUMP SPECS

Principle of Pump Operation

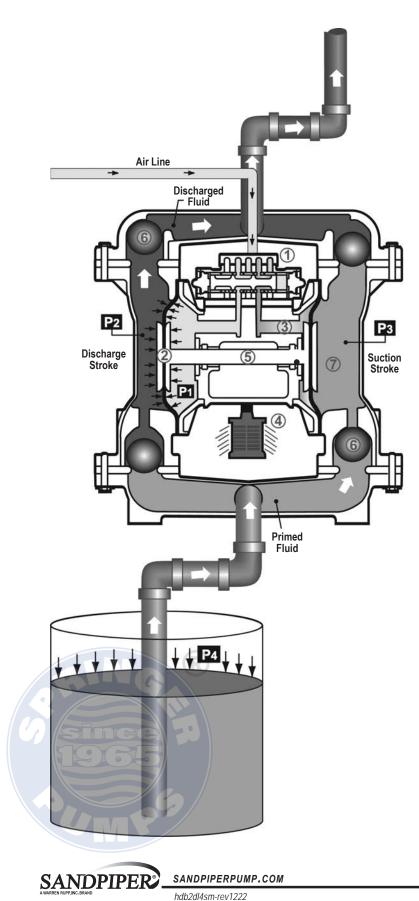

Air-Operated Double Diaphragm (AODD) pumps are powered by compressed air or nitrogen.


The main directional (air) control valve ① distributes compressed air to an air chamber, exerting uniform pressure over the inner surface of the diaphragm ②. At the same time, the exhausting air ③ from behind the opposite diaphragm is directed through the air valve assembly(s) to an exhaust port ④.

As inner chamber pressure (P1) exceeds liquid chamber pressure (P2), the rod ⑤ connected diaphragms shift together creating discharge on one side and suction on the opposite side. The discharged and primed liquid's directions are controlled by the check valves (ball or flap)⑥ orientation.

The pump primes as a result of the suction stroke. The suction stroke lowers the chamber pressure (P3) increasing the chamber volume. This results in a pressure differential necessary for atmospheric pressure (P4) to push the fluid through the suction piping and across the suction side check valve and into the outer fluid chamber $\overline{\mathcal{D}}$.

Suction (side) stroking also initiates the reciprocating (shifting, stroking or cycling) action of the pump. The suction diaphragm's movement is mechanically pulled through its stroke. The diaphragm's inner plate makes contact with an actuator plunger aligned to shift the pilot signaling valve. Once actuated, the pilot valve sends a pressure signal to the opposite end of the main directional air valve, redirecting the compressed air to the opposite inner chamber.

SUBMERGED ILLUSTRATION

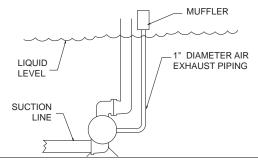


Pump can be submerged if the pump materials of construction are compatible with the liquid being pumped. The air exhaust must be piped above the liquid level. When the pumped product source is at a higher level than the pump (flooded suction condition), pipe the exhaust higher than the product source to prevent siphoning spills.

Model HDB2/HDB50 · 9

Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®

Recommended Installation Guide Available Accessories: Surge Suppressor Filter/Regulator Air Dryer Lubricator

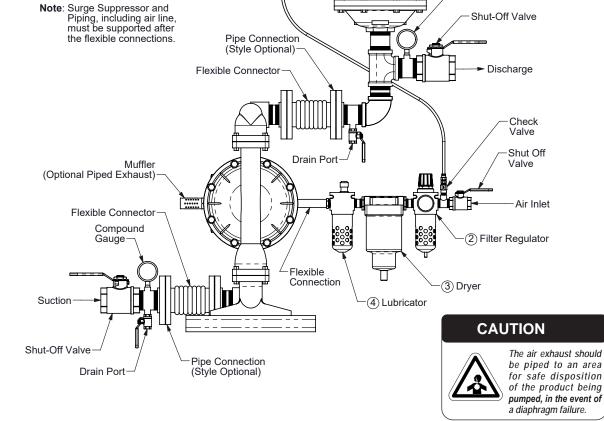

Installation And Start-Up

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

Air Supply

Connect the pump air inlet to an air supply with sufficient capacity and pressure to achieve desired performance. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

Air Valve Lubrication

The air distribution system is designed to operate WITHOUT lubrication. This is the standard mode of operation. If lubrication is desired, install an air line lubricator set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes. Consult the Performance Curve to determine air consumption.

Air Line Moisture

Water in the compressed air supply may cause icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer.

Air Inlet And Priming

To start the pump, slightly open the air shut-off valve. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.

10 · Model HDB2/HDB50

SANDPIPERPUMP.COM

hdb2dl4sm-rev1222



Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®

Troubleshooting Guide

Deadhead (system pressure meets or exceeds air supply pressure). Air valve or intermediate gaskets installed incorrectly. Bent or missing actuator plunger. Pump is over lubricated.	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units). Install gaskets with holes properly aligned. Remove pilot valve and inspect actuator plungers.
Bent or missing actuator plunger. Pump is over lubricated.	
Pump is over lubricated.	Remove pilot valve and inspect actuator plungers.
	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
Lack of air (line size, PSI, CFM).	Check the air line size and length, compressor capacity (HP vs. cfm required).
Check air distribution system.	Disassemble and inspect main air distribution valve, pilot valve and pilot valve actuators.
Discharge line is blocked or clogged manifolds.	Check for inadvertently closed discharge line valves. Clean discharge manifolds/piping.
Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
Blocked air exhaust muffler.	Remove muffler screen, clean or de-ice, and re-install.
Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
Pump chamber is blocked.	Disassemble and inspect wetted chambers. Remove or flush any obstructions.
Cavitation on suction side.	Check suction condition (move pump closer to product).
Check valve obstructed. Valve ball(s) not seating properly or sticking.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Clean out around valve ball cage and valve seat area. Replace valve ball or valve seat if damaged. Use heavier valve ball material.
Valve ball(s) missing (pushed into chamber or manifold).	Worn valve ball or valve seat. Worn fingers in valve ball cage (replace part). Check Chemical Resistance Guide for compatibility.
Valve ball(s) / seat(s) damaged or attacked by product.	Check Chemical Resistance Guide for compatibility.
Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
v	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
· ·	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
	Remove muffler screen, de-ice, and re-install. Install a point of use air drier.
•	Clean manifolds to allow proper air flow.
00	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow.
supply pressure).	(Does not apply to high pressure 2:1 units).
Cavitation on suction side.	Check suction (move pump closer to product).
Lack of air (line size, PSI, CFM).	Check the air line size, length, compressor capacity.
Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
Air supply pressure or volume exceeds system hd.	Decrease inlet air (press. and vol.) to the pump. Pump is cavitating the fluid by fast cycling.
Undersized suction line.	Meet or exceed pump connections.
Restrictive or undersized air line.	Install a larger air line and connection.
Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
• •	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Disassemble pump chambers: inspect of diaphragin quite of loose diaphragin pate assembly.
, , ,	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Purge chambers through tapped chamber vent plugs. Purging the chambers of air can be dangerous
1 3 1 3 1	Replace diaphragms, check for damage and ensure diaphragm plates are tight. Check for excessive inlet pressure or air pressure. Consult Chemical Resistance Chart for compatibil
	with products, cleaners, temperature limitations and lubrication.
	Enlarge pipe diameter on suction side of pump.
Excessive flooded suction pressure.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener.
Misapplication (chemical/physical incompatibility).	Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn.	Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge.
Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
Undersized suction line.	Meet or exceed pump connections.
Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Visually inspect all suction-side gaskets and pipe connections.
0	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Inspect check valves and seats for wear and proper setting. Replace if necessary.
, ,	Purge chambers through tapped chamber vent plugs.
	Pump chamber is blocked. Cavitation on suction side. Check valve obstructed. Valve ball(s) not seating properly or sticking. Valve ball(s) missing (pushed into chamber or manifold). Valve ball(s) / seat(s) damaged or attacked by product. Check valve and/or seat is worn or needs adjusting. Suction line is blocked. Excessive suction lift. Suction side air leakage or air in product. Pumped fluid in air exhaust muffler. Over lubrication. Icing. Clogged manifolds. Deadhead (system pressure meets or exceeds air supply pressure). Cavitation on suction side. Lack of air (line size, PSI, CFM). Excessive suction lift. Air supply pressure or volume exceeds system hd. Undersized suction line. Restrictive or undersized air line. Suction side air leakage or air in product. Suction line is blocked. Pumped fluid in air exhaust muffler. Check valve obstructed. Check valve and/or seat is worn or needs adjusting. Entrained air or vapor lock in chamber(s). Diaphragm failure, or diaphragm plates loose. Diaphragm stretched around center hole or bolt holes. Cavitation. Excessive flooded suction pressure. Misapplication (chemical/physical incompatibility). Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn. Excessive suction lift. Undersized suction line.


For additional troubleshooting tips contact After Sales Support at service.warrenrupp@idexcorp.com or 419-524-8388

SANDPIPER

SANDPIPERPUMP.COM hdb2dl4sm-rev1222 Model HDB2/HDB50 · 11

Springer Pumps, LLC Springer Parts®

Composite Repair Parts Drawing

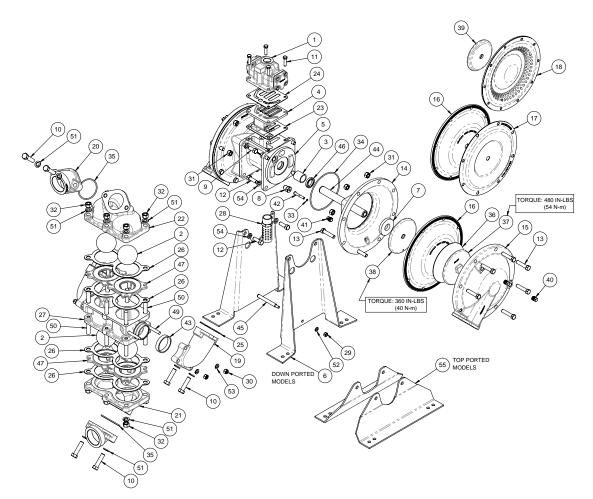

Service & Repair Kits

476.362.000	Air End Kit Sleeve and Spool Set, O-rings, Bumpers, U-Cup Seals, and Gaskets.	476.364.365	Wet End Kit Neoprene Diaphragms, Weighted Neoprene Balls, Conductive Neoprene Seat Gaskets, Fabric Manifold Gaskets, Neoprene O-rings, Neoprene Wear Pads
476.314.000	Air End Kit Seals, O-rings, Gaskets, Grease Packet Bumpers Plunger Actuators, Plunger Bushings	476.364.644	Wet End Kit Santoprene Diaphragms, PTFE Balls, Conductive EPDM Seat Gaskets, PTFE Manifold Gaskets, EPDM O-rings, EPDM Wear Pads
476.364.354	Wet End Kit Santoprene Diaphragms, Santoprene Balls, Santoprene Wear Pads, Conductive EPDM Seat Gaskets, Fiber Manifold Gaskets, EPDM O-rings	476.364.633	Wet End Kit FKM Diaphragms, FKM Wear Pads, PTFE Balls, Conductive PTFE Seat Gaskets, FKM Seals, PTFE Encapsulated O-rings
476.364.360	Wet End Kit Nirtile Diaphragms, Weighted Nitrile Balls, Conductive Nirtile Seat Gaskets, Fabric Manifold Gaskets, Nitrile	476.364.635	Wet End Kit Neoprene Diaphragms, and PTFE Overlay Diaphragm, Balls, Sealing Rings, O-rings, & Gaskets
476.364.364	O-Rings, Nitrile Wear Pads Wet End Kit		the type 3 to Type 4
470.304.304	EPDM Diaphragms, EPDM Balls, Conductive EPDM	475.303.379	Check valve Seal & Conductive Duna Seal Gaskets
	Seat Gaskets, Fabric Manifold Gaskets, EPDM O-rings,	475.303.384	Check Valve Seat & Conductive Neoprene Seat Gaskets
	EPDM Wear Pads	475.303.385	Check Valve Seat & Conductive EPDM Seat Gaskets
		475.303.608	Check Valve Seat & Conductive PTFE Seat Gaskets

12 · Model HDB2/HDB50

SANDPIPERPUMP.COM hdb2dl4sm-rev1222



Tel: 866-777-6060

Springer Pumps, LLC Springer Parts®

Composite Repair Parts List

Item	Part Number	Description	Qty.				
\bigcirc	031.212.156	Air Valve Assy (Aluminum Center - see pg #11 for		$ \mathfrak{A}$	360.041.379	Gasket, Pilot Valve	1
-		details)	1	18	360.048.425	Gasket, Air Valve	1
	031.212.010	Air Valve Assy (Cast Iron Center)	1		360.049.425	Gasket, Manifold - Fiber	2
	031.212.001	Air Valve Assy (Alum Center SS/BRASS Slv Spool-			360.049.603	Gasket, Manifold - Gylon	2
		High Clearance)	1	26	360.117.379	Gasket, Manifold - Conductive Buna	4
	031.212.004	Air Valve Assy (Alum Center SS/BRASS Slv-Spool)	1	20	360.117.384	Gasket, Manifold - Conductive Duna Gasket, Manifold - Conductive Neoprene	4
	031.213.156	Air Valve Assy (Alum Center - stroke Indicator)	1		360.117.385	Gasket, Manifold - Conductive EPDM	4
	031.213.010	Air Valve Assy (Cast Iron Center - stroke Indicator)	1		360.117.608	Gasket, Manifold - Conductive PTFE	4
2	050.017.354	Ball, Check - Santoprene	4	27	518.027.156		1
-	050.017.360W	Ball, Check - Buna (weighted)	4	2'	518.027.010	Manifold (w/ cast iron wetted)Includes items #49 & #50	
	050.017.364W	Ball, Check - EPDM (weighted)	4		518.027.110	Manifold (w/ stainless wetted)Includes items #49 & #50	
	050.017.365W	Ball, Check - Neoprene (weighted)	4		518.027.112	Manifold (w/ alloy-C wetted) Includes items #49 & #50	
	050.018.600	Ball, Check - PTFE	4	28	530.033.000	Muffler, Metal	1
3	070.006.170	Bushing, Intermediate (included in item #5)	2	29	545.004.330	Nut, Hex 5/16-18 (down ported units only)	2
4	095.073.001	Pilot Valve Assy	1	30	545.005.330	Nut, Hex 3/8-16	4
5	114.002.156	Intermediate (w/ aluminum center)	1	31	545.007.330	Nut, Hex 7/16-14	12
	114.002.010	Intermediate (w/ cast iron center)	1	32	545.008.330	Nut, Hex 1/2 x 13	12
6	115.057.080	Bracket, Leg (Down Ported)	2	²	560.001.360	O-ring	2
7	132.002.360	Bumper, Diaphragm	2	34	560.022.360	O-ring	2
8	135.016.162	Bushing, Plunger	2	35	560.047.360	O-ring	2 2
9	170.024.330	Capscrew, Hx-Hd 7/16-14 x 1.00	4		560.047.364	O-ring	2
10	170.030.330	Capscrew, Hx-Hd 1/2-13 x 2.00	8		560.047.365	O-ring	2 2
11	170.045.330	Capscrew, Hx-Hd 5/16-18 x 1.25	4		560.060.611	O-ring (FKM / PTFE units)	2
12	170.058.330	Capscrew, Hx-Hd 7/16-14 x 1.25	4	36	570.009.360	Pad, Wear - Buna	2
13	170.060.330	Capscrew, Hx-Hd 7/16-14 x 2.00	16		570.009.363	Pad, Wear - FKM	2
14	196.001.157	Chamber, Inner (w/ aluminum center) Includes #41	2		570.009.364	Pad, Wear - EPDM/Santoprene	2
	196.001.010	Chamber, Inner (w/ cast iron center) Includes #41	2		570.009.365	Pad, Wear - Neoprene	2
15	196.035.156	Chamber, Outer (w/ aluminum wetted) Includes #41	2	37	612.039.157	Plate, Outer Diaphragm Assy (w/ aluminum wetted)	2
	196.035.010	Chamber, Outer (w/ cast iron wetted) Includes #40	2	0,	612.039.010	Plate, Outer Diaphragm Assy (w/ cast iron wetted)	2
	196.035.110	Chamber, Outer (w/ stainless wetted) Includes #40			612.097.110	Plate, Outer Diaphragm Assy (w/ stainless wetted)	2
	196.035.112	Chamber, Outer (w/ alloy-C wetted) Includes #40			612.097.112	Plate, Outer Diaphragm Assy (w/ alloy-c wetted)	2
16	286.007.354	Diaphragm - Santoprene	2	38	612.047.330	Plate, Inner Diaphragm	2
	286.007.356	Diaphragm - Hytrel		39	612.215.330	Plate, Inner Diaphragm (w/ Synthesis Diaphs item #18)	
	286.007.360	Diaphragm - Buna	2	40	618.003.330	Plug, Pipe 1/4" (w/ aluminum / cast iron wetted)	4
	286.007.363	Diaphragm - FKM	2		618.003.110	Plug, Pipe 1/4" (w/ stainless wetted)	4
	286.007.364	Diaphragm - EPDM	2		618.003.112	Plug, Pipe 1/4" (w/ alloy-c wetted)	4
	286.007.365	Diaphragm - Neoprene	2	41	618.003.330	Plug, Pipe 1/4" (w/ aluminum / cast iron wetted)	
17	286.020.604	Diaphragm, Overlay - PTFE	2		620.011.114	Plunger, Actuator	2 2
18	286.118.000	Diaphragm, Synthesis - One Piece PTFE		4 2 43	675.013.360	Ring, Sealing - Buna	2
		(uses item #39)	2		675.013.363	Ring, Sealing - FKM	2
19	312.033.156	Elbow, Manifold (w/ aluminum wetted)	2		675.013.364	Ring, Sealing - EPDM	2
	312.033.010	Elbow, Manifold (w/ cast iron wetted)	2		675.013.365	Ring, Sealing - Neoprene	2
	312.033.110	Elbow, Manifold (w/ stainless wetted)	2		675.013.600	Ring, Sealing - PTFE	2
	312.033.112	Elbow, Manifold (w/ alloy-C wetted)	2	44	685.007.120	Rod, Diaphragm	1
20	334.025.156	Porting Flange, Threaded NPT (w/ aluminum wetted)		45	685.032.080	Rod, Connecting, Foot Bracket	1
	334.025.010	Porting Flange, Threaded NPT (w/ cast iron wetted)	2	46	720.004.360	Seal, U-Cup	2
	334.025.110	Porting Flange, Threaded NPT (w/ stainless wetted)	2	47	722.106.110	Seat, Check Valve	2
	334.025.112	Porting Flange, Threaded NPT (w/ alloy-C wetted)	2	48	807.026.330	Stud, Diaphragm Plate (not shown - included with #37)	2
	334.025.156E	Porting Flange, Threaded BSPT (w/ aluminum wetter		49	807.038.330	Stud, Threaded-3/8", Manifold (included with #27)	4
	334.025.010E	Porting Flange, Threaded BSPT (w/ cast iron wetted)		50	807.039.330	Stud, Threaded-1/2", Manifold (included with #27)	12
	334.025.110E	Porting Flange, Threaded BSPT (w/ stainless wetted) 2	51	900.003.330	Washer, Lock 1/2"	20
	334.025.112E	Porting Flange, Threaded BSPT (w/ alloy-C wetted)	2	52	900.004.330	Washer, Lock 5/16" (down ported only)	2
21	334.026.156	Flange, Suction (w/ aluminum wetted)	1	53	900.005.330	Washer, Lock 3/8"	6
	334.026.010	Flange, Suction (w/ cast iron wetted)	1	54	900.006.330	Washer, Lock 7/16" (side ported units)	8
	334.026.110	Flange, Suction (w/ stainless wetted)	1	55	115.053.080	Bracket, Leg (Top Ported)	2
	334.026.112	Flange, Suction (w/ alloy-C wetted)	1			······································	
22	334.027.156	Flange, Discharge (w/ aluminum wetted)	1				
	334.027.010	Flange, Discharge (w/ cast iron wetted)	1				
	334.027.110	Flange, Discharge (w/ stainless wetted)	1				
	334.027.112	Flange, Discharge (w/ alloy-C wetted)	1	I			

LEGEND:

O= Items contained within Air End Kits

End Kits

* Air End Kit only includes sleeve and spool set, not entire air valve assembly

Note: Kits contain components specific to the material codes.

SANDPIPER

SANDPIPERPUMP.COM hdb2dl4sm-rev1222

Model HDB2/HDB50 · 13

Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910

Springer Pumps, LLC Springer Parts®

Websites: www.springerpumps.com

www.springerparts.com

3: EXP VIEV

Material Codes - The Last 3 Digits of Part Number

364..... EPDM Rubber

000.....Assembly, sub-assembly; and some purchased items 010.....Cast Iron 015.....Ductile Iron 020.....Ferritic Malleable Iron 080.....Carbon Steel, AISI B-1112 110.....Alloy Type 316 Stainless Steel 111 Alloy Type 316 Stainless Steel (Electro Polished) 112.....Alloy C 113.....Alloy Type 316 Stainless Steel (Hand Polished) 114.....303 Stainless Steel 115.....302/304 Stainless Steel 117.....440-C Stainless Steel (Martensitic) 120.....416 Stainless Steel (Wrought Martensitic) 148..... Hardcoat Anodized Aluminum 150.....6061-T6 Aluminum 152.....2024-T4 Aluminum (2023-T351) 155.....356-T6 Aluminum 156.....356-T6 Aluminum 157.....Die Cast Aluminum Alloy #380 158.....Aluminum Alloy SR-319 162.....Brass, Yellow, Screw Machine Stock 165.....Cast Bronze, 85-5-5-5 166.....Bronze, SAE 660 170.....Bronze, Bearing Type, **Oil Impregnated** 180.....Copper Alloy 305.....Carbon Steel, Black Epoxy Coated 306.....Carbon Steel, Black PTFE Coated 307.....Aluminum, Black Epoxy Coated 308.....Stainless Steel, Black PTFE Coated 309.....Aluminum, Black PTFE Coated 313.....Aluminum, White Epoxy Coated 330.....Zinc Plated Steel 332.....Aluminum, Electroless Nickel Plated 333.....Carbon Steel, Electroless Nickel Plated 335.....Galvanized Steel 337.....Silver Plated Steel 351.....Food Grade Santoprene® 353..... Geolast; Color: Black 354.....Injection Molded #203-40 Santoprene® Duro 40D +/-5; Color: RED 356.....Hytrel® 357.....Injection Molded Polyurethane 358.....Urethane Rubber (Some Applications) (Compression Mold) 359..... Urethane Rubber 360.....Nitrile Rubber Color coded: RED 363.....FKM (Fluorocarbon) Color coded: YELLOW

14 · Model HDB2/HDB50

Color coded: BLUE 365.....Neoprene Rubber Color coded: GREEN 366.....Food Grade Nitrile 368.....Food Grade EPDM 371.....Philthane (Tuftane) 374.....Carboxylated Nitrile 375.....Fluorinated Nitrile 378.....High Density Polypropylene 379..... Conductive Nitrile 384.....Conductive Neoprene 385.....Conductive EPDM 408.....Cork and Neoprene 425.....Compressed Fibre 426.....Blue Gard 440.....Vegetable Fibre 500.....Delrin® 500 502.....Conductive Acetal, ESD-800 503.....Conductive Acetal, Glass-Filled 506.....Delrin® 150 520.....Injection Molded PVDF Natural color 540.....Nylon 542 Nylon 544.....Nylon Injection Molded 550.....Polyethylene 551.....Glass Filled Polypropylene 552..... Unfilled Polypropylene 555.....Polyvinyl Chloride 556.....Black Vinyl 558.....Conductive HDPE 570.....Rulon II® 580.....Ryton® 600.....PTFE (virgin material) Tetrafluorocarbon (TFE) 603.....Blue Gylon® 604.....PTFE 606.....PTFE 607.....Envelon 608.....Conductive PTFE 610.....PTFE Encapsulated Silicon 611.....PTFE Encapsulated FKM 632.....Neoprene/Hytrel® 633 FKM/PTFE 634.....EPDM/PTFE 635.....Neoprene/PTFE 637.....PTFE, FKM/PTFE 638.....PTFE, Hytrel®/PTFE 639.....Nitrile/TFE 643.....Santoprene®/EPDM 644.....Santoprene®/PTFE 656.....Santoprene® Diaphragm and

- PTFE Overlay, Balls, and Seals
- 668.....PTFE, FDA Santoprene*/PTFE
 Delrin and Hytrel are registered tradenames of E.I. DuPont.
- Nylatron is a registered tradename of Polymer Corp.
- Gylon is a registered tradename of Garlock, Inc.
- Santoprene is a registered tradename of Exxon Mobil Corp.
- Rulon II is a registered tradename of Dixion Industries Corp.
- Ryton is a registered tradename of Phillips Chemical Co.
- Valox is a registered tradename of General Electric Co.

RECYCLING

Warren Rupp is an ISO14001 registered company and is committed to minimizing the impact our products have on the environment. Many components of SANDPIPER® AODD pumps are made of recyclable materials. We encourage pump users to recycle worn out parts and pumps whenever possible, after any hazardous pumped fluids are thoroughly flushed. Pump users that recycle will gain the satisfaction to know that their discarded part(s) or pump will not end up in a landfill. The recyclability of SANDPIPER products is a vital part of Warren Rupp's commitment to environmental stewardship.

SPRINGER PARTS

Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®

Check Balls/EPDM Seats

661.....EPDM/Santoprene®

666.....FDA Nitrile Diaphragm,


SANDPIPERPUMP.COM

hdb2dl4sm-rev1222

Websites: www.springerpumps.com www.springerparts.com

3: EXP VIEW

Air Distribution Valve Assembly

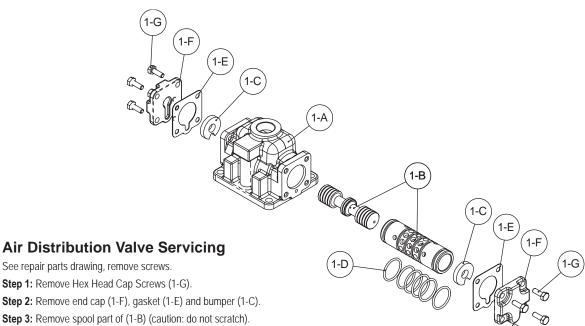

- Step 4: Press sleeve (1-B) from body (1-A).
- Step 5: Inspect O-Ring (1-D) and replace if necessary.
- Step 6: Lightly lubricate O-Rings (1-D) on sleeve (1-B).
- Step 7: Press sleeve (1-B) into body (1-A).
- Step 8: Reassemble in reverse order, starting with step 3.

Note: Sleeve and spool (1-B) set is match ground to a specified clearance sleeve and spools (1-B) cannot be interchanged.

MAIN AIR VALVE ASSEMBLY PARTS LIST

ltem	Part Number	Description	Qty
1	031.212.156	Air Valve Assembly	1
1 <u>-</u> A	095.043.156	Body, Air Valve	1
(1-B)	031.209.000	Sleeve and Spool Set	1
(1-B) (1-0)	132.014.358	Bumper	2
(D	560.020.360	O-Ring	6
	360.010.425	Gasket	2
1-F	165.011.157	End Cap	2
1-G	170.032.330	Hex Head Capscrew	8

FOR CAST IRON CENTERS ONLY

ltem	Part Number	Description	Qty
1	031.212.010	Air Valve Assembly	1
1 <u>-</u> A	095.043.010	Body, Air Valve	1
(1-B)	031.209.000	Sleeve and Spool Set	1
1-0	132.014.358	Bumper	2
(\mathbf{D})	560.020.360	O-Ring	6
()	360.010.425	Gasket	2
1-F	165.011.010	End Cap	2
1-G	170.032.330	Hex Head Capscrew	8

LEGEND:

O = Items contained within Air End Kits

Note: Kits contain components specific to the material codes.

SANDPIPER

hdb2dl4sm-rev1222

SANDPIPERPUMP.COM




IMPORTANT

Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

Model HDB2/HDB50 · 15

Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®

Pilot Valve Assembly

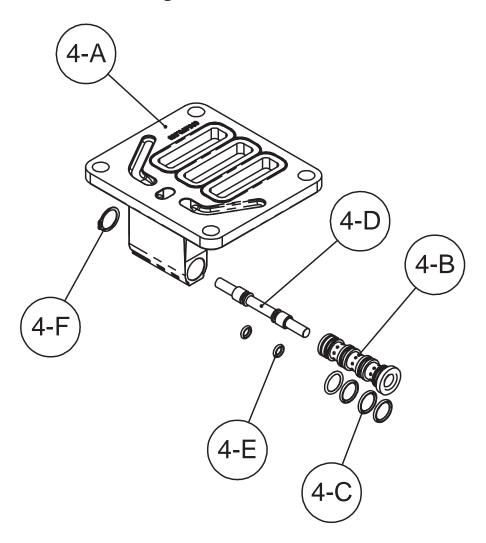

Pilot Valve Servicing

With Pilot Valve removed from pump.

- Step 1: Remove snap ring (4-F).
- Step 2: Remove sleeve (4-B), inspect O-Rings (4-C), replace if required.
- Step 3: Remove spool (4-D) from sleeve (4-B),
- inspect O-Rings (4-E), replace if required. **Step 4:** Lightly lubricate O-Rings (4-C) and (4-E).
- Reassemble in reverse order.

PILOT VALVE ASSEMBLY PARTS LIST

Item	Part Number	Description	Qty
4	095.073.001	Pilot Valve Assembly	1
4-A	095.070.558	Valve Body	1
4 <u>-</u> B	755.025.000	Sleeve (With O-Rings)	1
4-B (4-0)	560.033.360	O-Ring (Sleeve)	4
4 <u>-</u> D	775.026.000	Spool (With O-Rings)	1
(4-F)	560.023.360	O-Ring (Spool)	2
4-F	675.037.080	Retaining Ring	1

LEGEND:

O = Items contained within Air End Kits Note: Kits contain components specific to the material codes.



16 • Model HDB2/HDB50

Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts® SANDPIPERPUMP.COM hdb2dl4sm-rev1222

SANDPIPER

Diaphragm Servicing

Step 1: With manifolds and outer chambers removed, remove diaphragm assemblies from diaphragm rod. **DO NOT** use a pipe wrench or similar tool to remove assembly from rod. Flaws in the rod surface may damage bearings and seal. Soft jaws in a vise are recommended to prevent diaphragm rod damage.

Step 1.A: NOTE: Not all inner diaphragm plates are threaded. Some models utilize a through hole in the inner diaphragm plate. If required to separate diaphragm assembly, place assembly in a vise, gripping on the exterior cast diameter of the inner plate. Turn the outer plate clockwise to separate the assembly.

Always inspect diaphragms for wear cracks or chemical attack. Inspect inner and outer plates for deformities, rust scale and wear. Inspect intermediate bearings for elongation and wear. Inspect diaphragm rod for wear or marks.

Clean or repair if appropriate. Replace as required.

Step 2: Reassembly: There are two different types of diaphragm plate assemblies utilized throughout the Sandpiper product line: Outer plate with a threaded stud, diaphragm, and a threaded inner plate.

Outer plate with a threaded stud, diaphragm, and an inner plate with through hole. Secure threaded inner plate in a vise. Ensure that the plates are being installed with the outer radius against the diaphragm.

Step 3: Lightly lubricate, with a compatible material, the inner faces of both outer and inner diaphragm plates when using on non Overlay diaphragms (For EPDM water is recommended). No lubrication is required.

Step 4: Push the threaded outer diaphragm plate through the center hole of the diaphragm. **Note:** Most diaphragms are installed with the natural bulge out towards the fluid side. S05, S07, and S10 non-metallic units are installed with the natural bulge in towards the air side.

Step 5: Thread or place, outer plate stud into the inner plate. For threaded inner plates, use a torque wrench to tighten the assembly together. Torque values are called out on the exploded view.

Repeat procedure for second side assembly. Allow a minimum of 15 minutes to elapse after torquing, then re-torque the assembly to compensate for stress relaxation in the clamped assembly.

Step 6: Thread one assembly onto the diaphragm rod with sealing washer (when used) and bumper.

Step 7: Install diaphragm rod assembly into pump and secure by installing the outer chamber in place and tightening the capscrews.



SANDPIPERPUMP.COM

hdb2dl4sm-rev1222

Step 8: On opposite side of pump, thread the remaining assembly onto the diaphragm rod. Using a torque wrench, tighten the assembly to the diaphragm rod. Align diaphragm through bolt holes, always going forward past the recommended torque. Torque values are called out on the exploded view. **NEVER** reverse to align holes, if alignment cannot be achieved without damage to diaphragm, loosen complete assemblies, rotate diaphragm and reassemble as described above.

Step 9: Complete assembly of entire unit.

One Piece Diaphragm Servicing (Bonded PTFE with integral plate) The One Piece diaphragm has a threaded stud installed in the integral plate at the factory. The inner diaphragm plate has a through hole instead of a threaded hole. Place the inner plate over the diaphragm stud and thread the first diaphragm / inner plate onto the diaphragm rod only until the inner plate contacts the rod. Do not tighten. A small amount of grease may be applied between the inner plate and the diaphragm to facilitate assembly. Insert the diaphragm / rod assembly into the pump and install the outer chamber. Turn the pump over and thread the second diaphragm / inner plate onto the diaphragm rod. Turn the diaphragm until the inner plate contacts the rod and hand tighten the assembly. Continue tightening until the bolt holes align with the inner chamber holes. DO NOT LEAVE THE ASSEMBLY LOOSE.

IMPORTANT



Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

Model HDB2/HDB50 · 17

Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Pumps, LLC Springer Parts®

5 - YEAR Limited Product Warranty

Warren Rupp, Inc. ("Warren Rupp") warrants to the original end-use purchaser that no product sold by Warren Rupp that bears a Warren Rupp brand shall fail under normal use and service due to a defect in material or workmanship within five years from the date of shipment from Warren Rupp's factory. Warren Rupp brands include Warren Rupp[®], SANDPIPER[®], SANDPIPER Signature Series[™], MARATHON[®], Porta-Pump[®], SludgeMaster[™] and Tranguilizer[®].


The use of non-OEM replacement parts will void (or negate) agency certifications, including CE, ATEX, CSA, 3A and EC1935 compliance (Food Contact Materials). Warren Rupp, Inc. cannot ensure nor warrant non-OEM parts to meet the stringent requirements of the certifying agencies.

~ See complete warranty at https://www.sandpiperpump.com/



Fax: 866-777-6383 Int'l: +001 267 404 2910 Springer Parts®

www.springerparts.com

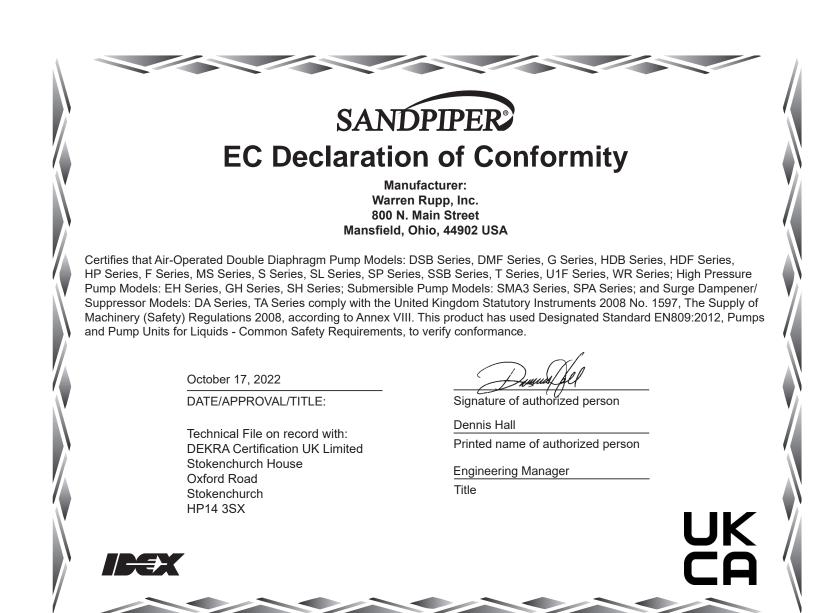




Tel: 866-777-6060 Fax: 866-777-6383 Int'l: +001 267 404 2910





	EU Dec	laration of Co	nformity
		Manufacturer:	-
		Warren Rupp, Inc.	
		A Unit of IDEX Corporation	
		800 North Main Street	
This dealeration of a	anformity is issued under	Mansfield, OH 44902 US	
	gm Pumps (AODD) and		urer. Warren Rupp, Inc. declares that Air Oper y with the requirements of Directive 2014/34/E
Harmonized Standar • EN ISO 80079-3		• EN ISO 80079-37: 2016	• EN 60079-25: 2010
1. AODD Pumps and	Surge Suppressors - Te	echnical File on record with DEKRA Cert Meander 10	51
Hazardous Location	Applied	6825 MJ Arr The Netherla	
II 2 G Ex h	IC T5225°C (T2) Gb		
Metallic Se Conduc	ries, HDF Series, MS Se	nal aluminum components (DMF Serie eries, S Series, SH Series, SL Series, S s with integral muffler (PB Series, S Ser	es, EH Series, F Series, G & GH Series, HDB P Series, ST Series, T Series, and U1F Series ies, SL Series, SP Series)
II 2 D Ex h l	IB T5225°C (T2) Gb IIB T100°CT200°C Db es with sight tubes (VL) a		area of non-conductive external components
2. AODD Pumps - El	J Type Examination Cerl	tificate No.: DEKRA 18ATEX0094X - DE	EKRA Certification B.V. (0344) eander 1051
Hazardous Location	Applied:	68	25 MJ Arnhem le Netherlands
II 1 D Ex h I • Metallic pu	IC T5225°C (T2) Ga IIC T100°CT200°C Da Imp models with no exte		IDF Series, G Series)
	a IIIC T100°C Db	15, G20,G30 equipped with ATEX rated	d pulse output option
EX II 2 D Ex h r	nb IIC T5 Gb nb tb IIIC T100° Db del series S05, S1F, S15	, S20, S30 equipped with ATEX rated ir	tegral solenoid option
See "ATEX Detail	s" page in user's manua	l for more information	
	nation" page for condition		Dunghal
			- Channed Mrs
DATE/APPROVA	L/TITLE:		Dennis Hall

Springer Pumps, LLC Springer Parts® WR_DofC_ATEX_V_Rev1022 Websites: www.springerpumps.com www.springerparts.com

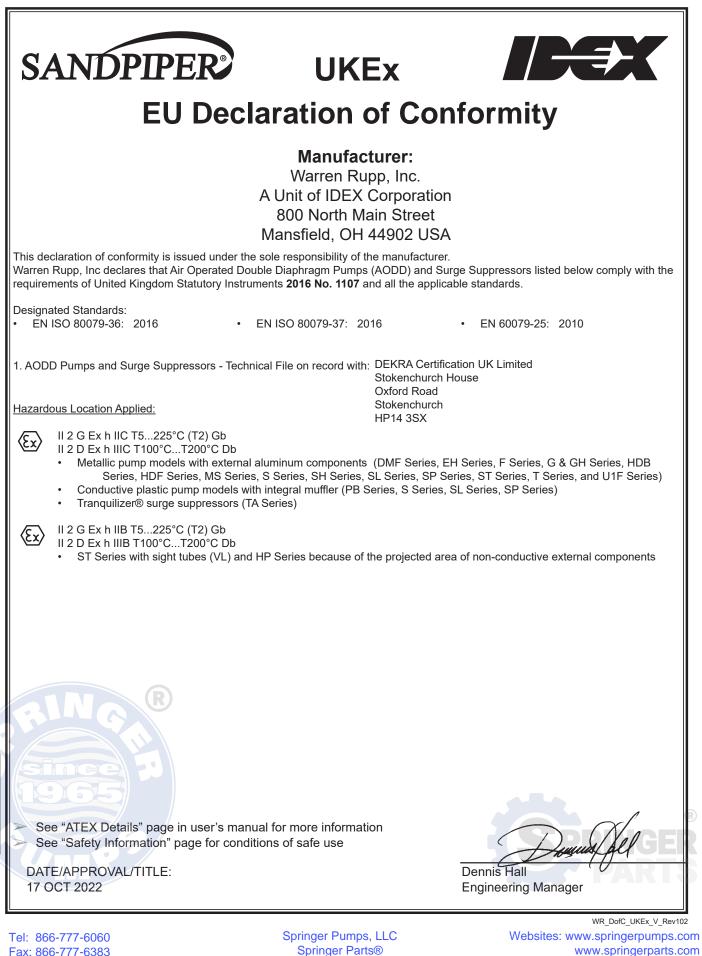

7: WARRANTY

Fax: 866-777-6383 Int'l: +001 267 404 2910